

DVP16~60ES200R/T/RM DVP20EX200R/T




**Don't Use Tool to
Firmware Upgrade**

Upgrade Steps

➤ Step1 、Connecting & PLC stop mode

- ① connect power line & power on 100~240VAC& PLC in stop mode
連接電源100~240VAC、上電並讓PLC在stop狀態

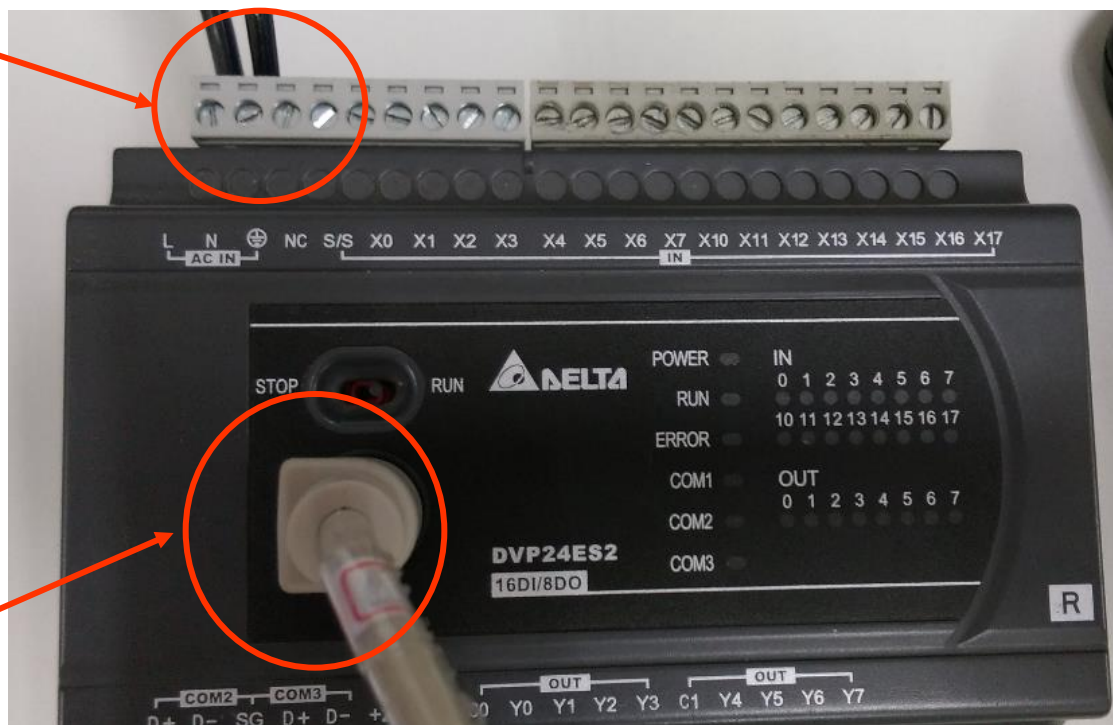


- ② Connect communication cable COM1

連接COM1通訊線

Upgrade Steps

➤ Step2 、Execute(執行) ES2-EX2_???_bin.exe

Select COM port 選擇電腦通訊埠

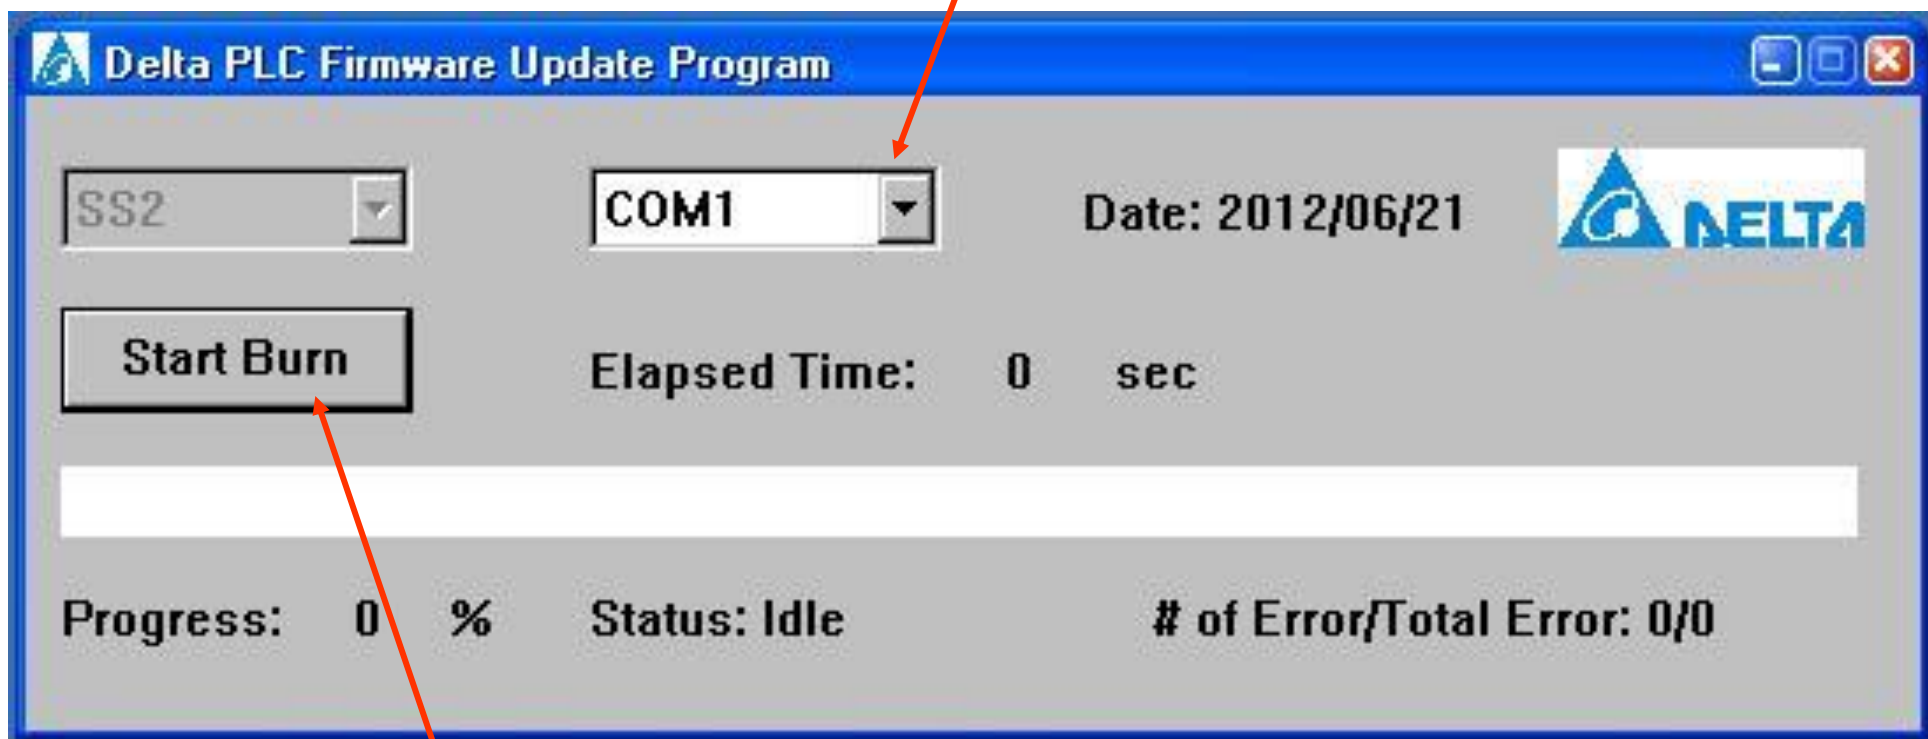

Press this button to start until program finished 按這裡開始燒錄

Upgrade Steps

- Step3 、 Power down & on, finish this process.
燒錄完成並下電之後，就完成燒錄流程